

# The right key for complete protection



The ultimate technology for  
**dosing caps**  
in **oral medical devices**  
and **food supplements**

**RewCap™** Exclusive Technology



Now all the problems concerning limited volume and stability of active ingredients in biphasic systems have the right solution:

## RewCap™ Exclusive Technology



### In a unique cap:


- ✓ Superior protection against moisture → high thickness polyethylene layer at bottom and aluminum seal on the top.
- ✓ Increased stability of active ingredients.
- ✓ Higher capacity for your formulations → up to ten times more than our competitors.




RewCap™ is also available for multidose applications thanks to its specific dropper

RewCap™ is the perfect solution for **probiotic formulations**

### How does it work?

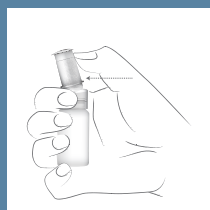

Push the top of the cap using the thumb until the complete detachment of the internal cap.

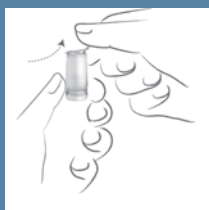

Remove the seal from the cap.



Turn the capsule over to pour the powder contained in it inside the vial.




Maintaining the cap on the vial, shake until complete dissolution of the powder.



Remove the cap and drink right away.

or

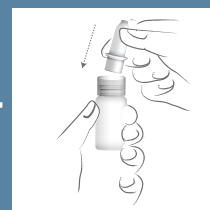

Insert the dropper in case of multidose product.



Via A. Lorenzetti, 3/A - Loc. Sambuca Val di Pesa - 50028 Tavarnelle Val di Pesa (Firenze - Italy)  
Tel. +39 055 8071140 - Fax +39 055 8071141  
www.biodue.com

For further information please contact: [info@biodue.com](mailto:info@biodue.com)

R. 00-0915

[www.rewcap.com](http://www.rewcap.com)



Patent Pending  
No. PCT/IB2015/052052