# Choose LEBAL®





You shouldn t suffer bad quality anymore!





(L.majo

Skin test antigen,2n Each dose: 0.10

## **Technical Specifications**

Power Supply:	1Ф, AC200V, 50/60HZ
Power Consumption:	2.0 KW
Air Pressure:	Ca. 3m²/h 4.5kg/cm²↑
Labeling speed:	100~300 bottles / min (diameter Φ25mm)
Labeling toleration:	±1.0mm
Container range:	height 30~120mm, Φ10~25mm
Label Paper Range:	height 10-80mm, length 25~80mm
Max Label-roll diameter:	OutsideΦ420mm, Inside of paper roll: Φ76mm
Distance between Label Papers:	3~4mm
Interval between Label and Based paper:	2mm
Machine Size:	as Layout below
Machine Weight:	N. wt. 320kg G. wt. 420kg
Measurement of Wood:	Packing wooden case 2.8 x 1.6 x 1.8 M³

Note: All specifications are subject to change without notice.

# ASL-300T ASI-300C

- \*Necessary change parts while changed different bottle: a. Vertical-infeed screw ,b. reverse tunnel set, c. Final reverse device.
- \*Optional deviece: Hot Stamp Printer
- \*Special case is available.
- \*Specifications & design subject to change without notice.
- \*LEBAL® TAIWAN trade mark belongs to LEBAL Trading co., Itd. All rights must be reserved and authorized by LEBAL Trading co., Itd. The labels of bottles shown inside the catalog are owned by every affiliated company.


### LEBAL TRADING CO., LTD.


ADD: 32846 No.136-1, 8 Neighbor, LunPing Village, GuanYing Township, TaoYuan County, Taiwan. TEL: +886-3-4081288 FAX: +886-3-4081866 e-mail: LEBAL.TAIWAN@gmail.com Website: www.e-lebal.com



Labeling Machine for Tiny cylinder bottles

Ampoules, Vials...etc.

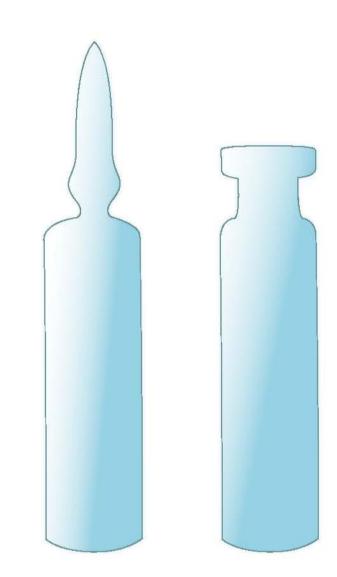

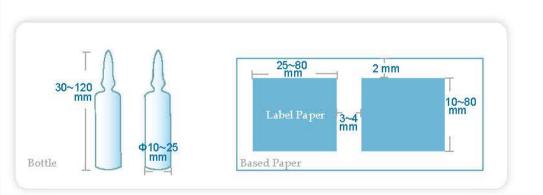




2008.04 version



# ASL-series


# Tiny Cylinder Bottles Labeling Machine (Ampoules, Vials)

Vertical Feeding / Horizontal Labeling

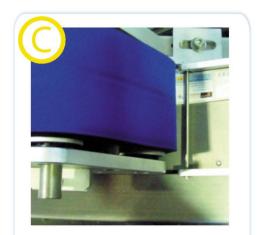

Paste with Sponge-wheel

Rotating sponge-wheel makes label pasted on bottles more firmly.

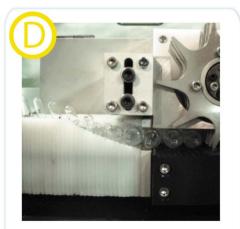

Final Reverse device Convenient to collect

Unique designed reverse device overturns bottles stand and that make collecting more efficient.





Vertical-Feed With reverse tunnel

Vertical-feed save manpower and more efficient. Bottles lie down thorugh reverse tunnel and easily labeled.



### Photo sensor

Untouch sensor can adjust shooting label length through press "+","-" button.

